

ballsafe

Instructions d'emploi et d'entretien

Français F

Operating and maintenance instructions

English GB

Gebrauchs- und Wartungsanleitung

Deutsch D

Instructies voor gebruik en onderhoud

Nederlands NL

Manual de empleo y de mantenimiento

Español E

Istruzioni per l'uso e la manutenzione

Italiano I

Instruções de uso e de manutenção

Português P

Οδηγίες χρήσης και συντήρησης

Ελληνικά GR

Vedlikeholds- og bruksanvisning

Norsk N

Instruktionsbok för användning och underhåll


Svenska S

Käyttö- ja huoltokäsikirja

Suomi FIN


Brugs- og vedligeholdelsesvejledning

Dansk DK

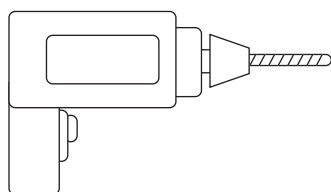


ø 30 x 105 mm

1

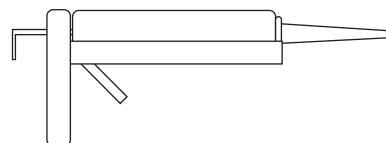


ø 30 x 105 mm

2

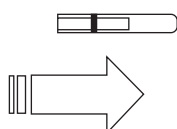


ø 30 x 105 mm

3

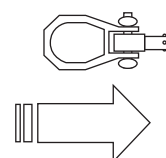

ø 30 x 105 mm

4

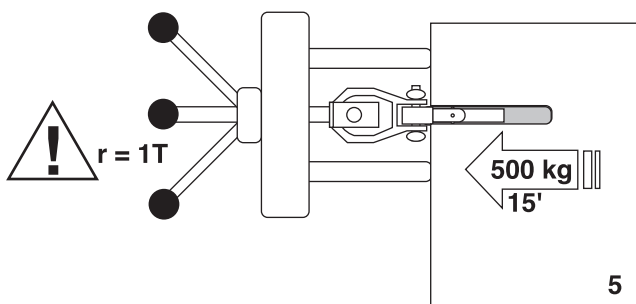

r = 1T

500 kg

5

Rupture F	= 1T	Ruðtura P	= 1T
Shear strength GB	= 1T	Κόψιμο G	= 1T
Bruchfestigkeit D	= 1T	Brudd N	= 1T
Breuk NL	= 1T	Brott S	= 1T
Rotura E	= 1T	Murtuminen FIN	= 1T
Rottura I	= 1T	Brud DK	= 1T