

tirfor[®]


Wire rope hoist with safety device
for lifting personnel

Hoist models

TU6P with BSA 15 301

TU12P with BSA 20 301

TU24P with BSA 35 30

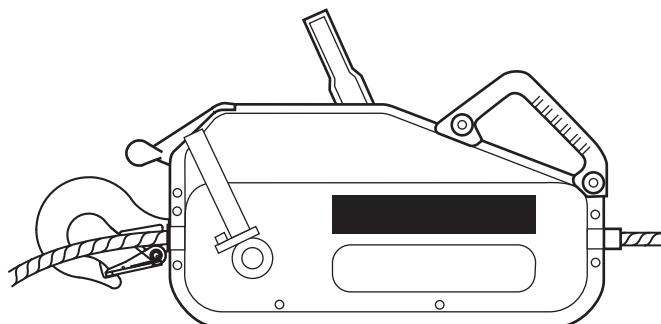

GB


Assembly and maintenance instruction

 **Tractel**[®]


The logo icon features a stylized figure of a person working on a structure, enclosed within a square frame.

CONTENTS

General warning	3
Specifications	4
1. Introduction and description of equipment	5
2. Assembly layouts	6
3. Installation	7
4. Releasing and closing the jaws / Inserting the wire ropes	9
5. Anchoring	11
6. Operation	12
7. Taking out of operation and storage	13
8. Safety devices	14
9. Replacing the shear pins	15
10. Wire ropes	16
11. Maintenance	17
12. Warnings against hazardous operations	18
13. Troubleshooting	19
14. Regular inspection	19
15. Equipment which may be used with the tirfor®	20
16. Statutory inspection	20

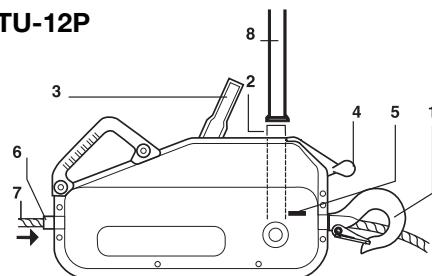Page**TU-6P****TU-12P**

* without carrying handle

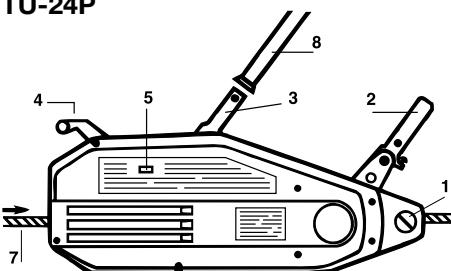TU-24P

Always concerned to improve the quality of its products, the TRACTEL Group reserves the right to modify the specifications of the equipment described in this manual.

The companies of the TRACTEL Group and their agents or distributors will supply on request descriptive documentation on the full range of TRACTEL products : lifting and pulling machines, permanent and temporary access equipment, safety devices, electronic load indicators, accessories such as blocks, hooks, slings, ground anchors, etc...

1. Hook / anchor pin
2. Forward operating lever
3. Reverse operating lever
4. Rope release lever
5. Rope release safety catch
6. Rope guide
7. Wire rope
8. Telescopic operating handle



Wire rope
on reeler

The Tractel network is able to supply an after-sales and regular maintenance service. Should you have any queries or require technical assistance, please do not hesitate to contact TRACTEL S.A.S.



GENERAL WARNING



1. Before using the **tirfor®** hoist and its **blocstop™** safety device on a temporary suspended platform, it is essential that users **read this manual and the manual for the temporary suspended platform** and comply with their instructions, in order to ensure safe and efficient operation of the equipment. **This manual must be kept** and made available to all operators. Additional copies may be supplied on request.
2. The **tirfor®** hoist and its **blocstop™** safety device, fitted on a temporary suspended platform, enable the safe performance of operations which require a high level of safety. Consequently, it is important to ensure that any person to whom you assign the operation of this equipment is capable of fulfilling the safety requirements involved in these operations.
3. Never use equipment which is not in apparent good order. **Replace any damaged wire ropes.** Continuously monitor the condition of the equipment and the wire ropes.
4. TRACTEL SAS accepts no responsibility for the consequences of dismantling the devices or any modification of the devices or wire ropes not performed under its control, in particular in the event of the replacement of original parts or wire ropes with parts or wire ropes from another source.
5. The models described in this manual **should only be used for lifting personnel on temporary suspended cradles.** The **tirfor®** hoist should be used in parallel with and at the same time as the **blocstop™** safety device.
6. Moreover, these models have been designed for manual operation and **should not be powered by a motor.** TRACTEL SAS has designed special motor-driven models (TU16H and TU32H).
7. The device must never be subjected to a load greater than the working load limit.
8. **tirfor®** and **blocstop™** devices must not be used in explosive atmospheres.
9. **IMPORTANT :** If you are responsible for assigning the equipment to an employee or similar person, ensure that you comply with the applicable health and safety at work regulations (see section 14).
10. The **tirfor®** hoist and its **blocstop™** must be part of a coherent personnel lifting system. Only devices for attaching wire ropes, the wire ropes themselves, cradles and other equipment described in this manual can be included. Any other equipment used with the lifting system must be subject to an CE type-examination by a competent body.

SPECIAL APPLICATIONS

For any special application, please do not hesitate to contact TRACTEL SAS.

For Belgium and Luxembourg, contact TRACTEL BENELUX.



SPECIFICATIONS

Hoist model		TU6P	TU12P	TU24P
blocstop™ model used		15 301	20 301	35 30
Working load limit	kg	600	1200	2400
Weight of hoist :				
machine	kg	8,4	18,0	27,0
telescopic handle	kg	1.0	2.4	2.4
Weight of blocstop™ :				
device	kg	4,0	6,0	9,7
Dimensions of hoist :				
length	mm	527	660	676
height	mm	265	330	330
width	mm	108	140	156
handle (closed/extended)	mm	51/77	68/119	68/119
Dimensions of blocstop™ :				
length	mm	173	22	313
height	mm	287	345	395
width	mm	75	75	90
Distance between wire ropes	mm	95	95	207
tirfor® original wire rope :				
diameter	mm	8,3	11.5	16.3
guaranteed breaking load	daN	4800	9600	19600
number of strands		5 or 6	5 or 6	5 or 6

1. INTRODUCTION AND DESCRIPTION OF THE EQUIPMENT :

1.1. tirfor® machine

The **tirfor®** machine is a portable hoisting device, through which the wire rope passes. It performs all the functions of a hoist.

Its originality lies in the traction principle used on the wire rope. Instead of being wound round a reeler, as with conventional winches, the wire rope is in a straight line held by two jaws, which act like two hands, pulling it up or helping to lower it. The mechanism automatically grips the wire ropes.



The load is transferred to the operating levers (forward or reverse) via a removable telescopic operating handle.

The equipment is fitted with an anchoring device ie a hook or pin, depending on the model, for quick attachment to the anchorage point on the stirrup of the temporary suspended platform, which must be sufficiently strong.

The **tirfor®** hoist complies with standard EN 1808 (08/99) and the amendment of the machinery directive concerning the lifting of personnel.

1.2. blocstop™ safety device

The **blocstop™** safety device, for temporary suspended platforms, is a safety device specially designed for lightweight suspended platforms fitted with two manual hoists.

The **blocstop™** safety device complies with standard EN 1808 (08/99) and the amendment of the machinery directive concerning the lifting of personnel.

To provide a coherent protection system which prevents the platform from falling, the **blocstop™** safety device is fitted on the secondary rope, which is identical to, but separate from, the suspension rope.

The secondary rope does not take the load during normal operation. If the suspension rope breaks, the hoist fails or there is a significant incline, the **blocstop™** and the secondary rope support the platform on the side where the fault has occurred.

The equipment delivered as standard consists of the hoist with its telescopic handle, the present manual and the EC incorporation statement.

A standard installation necessitates the separate purchase of a **blocstop™** and two wires ropes equipped with safety hook.

IMPORTANT : The wire ropes for tirfor® TUxP devices are specially designed to be used with tirfor® personnel lifting devices and blocstop™, in accordance with the special design of this equipment. These

wire ropes consist of five or six strands and are different from four-strand wire ropes which must only be used for lifting equipment. TRACTEL SAS cannot guarantee the operational safety of **tirfor®** and **blocstop™** devices used with wire ropes other than the recommended **tirfor®** wire ropes. The suspension rope and the secondary rope must be identical.

2. ASSEMBLY LAYOUTS:

2.1. tirfor® hoist:

For use on an ALTA L or TANGOR platform, the two TU6P hoists are attached to the end stirrups (see the manuals for the ALTA L and TANGOR platforms) using a fastener bolted on the lower bar of the stirrup.

For use on special platforms, the **tirfor®** TU6P, TU12P and TU24P hoists must be hooked onto a special support on the personnel lifting device. This support must be strong enough to comply with the working coefficient value recommended in the applicable standards, and at least 4. In Europe, a special platform must be subject to an CE type-approval by a notified body.


N. B.: Whatever the assembly layout, if the device is anchored directly to a fixed point, it must be possible for it to be aligned with the direction of the load or effort with no restriction. To ensure anti-tilt protection, the assembly instructions for the **blocstop™** BSA 15 301, BSA 20 301 and BSA 35 30 device must be followed.

2.2. blocstop™ safety device:

The platform is fitted with two manual hoists, and with a maximum length of 12, 15 or 18 metres, depending on the platform and the stirrups used (see the ALTA L, S or TANGOR "temporary suspended platform" operating manual).



The end stirrups are specially designed for manual hoists. (See the temporary suspended platform manual for how to fit the stirrups). Fix the hoist on each of the stirrups. Fit the **blocstop™** safety device using its two bolts (H M 12 for BS 15.301 and 20301, H M 22 for BS 35.30).

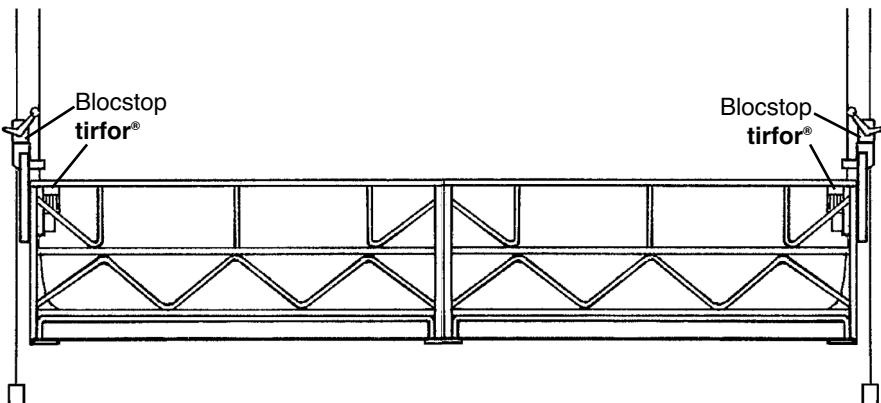

Fitting to other models of temporary suspended platform:

Fit the **blocstop™** on its bracket using its two bolts (see previous paragraph). It is important to comply with the distance between the suspension rope and the secondary rope to ensure that the **blocstop™** operates correctly. This distance ensures that the device operates correctly when the platform tilts and when the secondary rope takes over if the suspension rope breaks. **The two wire ropes must remain parallel.**

▲ **WARNING ▲ :** All layouts which require a special anchoring device should be inspected by a competent engineer


For any layout other than those described in this manual, please do not hesitate to contact TRACTEL S.A.S. For Belgium and Luxembourg, please contact TRACTEL BENELUX, or a competent specialist before putting it into operation.

▲ **WARNING ▲ :** Any layout which requires a calculation of the forces applied must be inspected by a competent engineer, in particular as regards the necessary strength of the fixed points used.

3. INSTALLATION:

N. B. : Wear work gloves to protect your hands when handling the wire ropes.

- Unwind the wire rope, avoiding twisting and forming loops
- Attach the end hooks on the wire ropes to the suspension point at the top

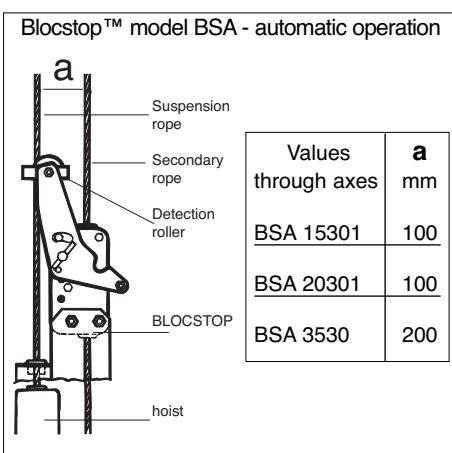

▲ **WARNING** ▲ When performing this operation, you should attach a personal fall arrest device at the top point to ensure that the operator is totally safe while carrying out the work.

To install the wire ropes:

Never let the wire ropes fall down the building from the top point, but

Place a rope down the length of the building

Attach the end hook on the first wire rope to the rope

Pull on the rope, to bring the hook on the wire rope to the height of the fixing point, while the second operator unwinds the wire rope on the storage reeler.

Attach the hook on the wire rope to the fixing point

Repeat this operation for the second wire rope

- Disengage the mechanism of the **tirfor®** (see section "Releasing and closing the jaws").

- Place the suspension rope in the **blocstop™** detection sling so that it is in contact with the detection roller inside the yoke of the sling.

- Insert the wire rope into the hole on the device at the end opposite the anchoring device (hook or pin).

- Push the wire rope through the device, if necessary helping it through by operating the forward lever.

- When the wire rope emerges from the hole on the anchoring device side, pull it through by hand up to the required point.

- Engage the mechanism by operating the clutch handle (see "Releasing and closing the jaws" section).

- Attach the **tirfor®** hoist to the stirrup on the platform or to the fixing point provided (see "Anchoring" section), taking care to lock the anchoring device (hook or pin, depending on the model).

- Pull out the telescopic handle until the locking spring comes out of its hole. If necessary rotate the two sections of the handle on one another so that the spring is in line with its hole.

- Push the telescopic handle fully down on the forward lever and turn it to lock it (approximately - turn).

- Operate the handle to tension the suspension rope, the detection roller on the **blocstop™** must allow the jaws on the safety device to open.

- Insert the secondary rope into the hole in the top of the **blocstop™**.

- Push the wire rope through the **blocstop™**.

- When the wire rope comes out of the other side of the device, pull it through by hand to the required point.

- Fit the counterweight on the secondary rope using the wire rope gripper.

- Rewind the wire ropes on their reelers. Wind them carefully without twisting them to avoid forming loops or kinks which would render them unusable.

When these operations have been completed, the device is ready to operate, provided the platform and wire ropes are correctly attached to the hoist (see sections "Anchoring" and "Assembly plan").

4. RELEASING AND CLOSING THE JAWS / INSERTING THE WIRE ROPES :

4.1. tirfor® hoists:

Each **tirfor®** hoist has a handle for releasing the clamping mechanism by an operation which must be only performed when there is no load.

The release lever therefore has two positions: released and engaged.

N.B. It is advisable to set the handle to the engaged position when the device is not in use. This will make the operator to release the device before inserting the wire rope.

4.1.2. TU6P and TU12P :

Releasing the jaws:



- Push in the rope release safety catch fully and start lifting the release lever upwards.



- Release the safety catch and continue lifting the release lever until it reaches its locked position. The mechanism is now leased.

Closing the jaws :

- Lift the release lever as above for a short distance.
- Push in the safeu catch and hold it in while allowing the release lever to slowly travel back to the engaged position by the action of its spring.

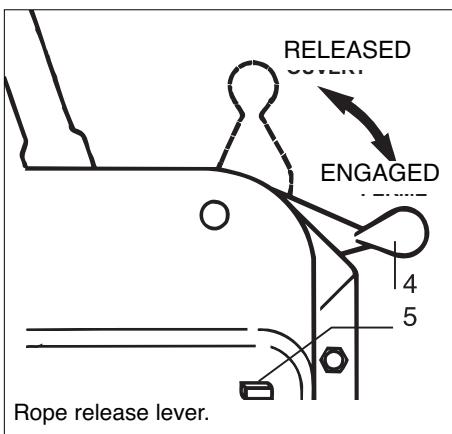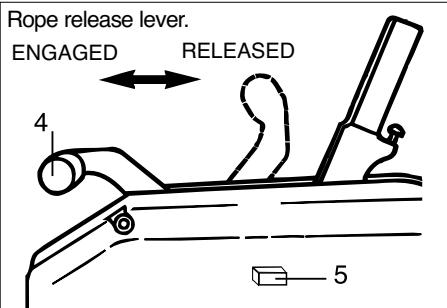

4.1.3. TU24P :

Place the anchorage end of the device against a support :

Releasing the jaws :


- Push in the rope release safety catch fully and start pushing the release lever towards the anchorage end of the device.
- Release the safety catch and continue to push the release lever until it reaches its locked position. The mechanism is now released.

Closing the jaws :

- Push the closing the jaws towards the anchorage end.
- Push in the safety catch and hold it in while allowing the release lever to slowly travel back to the engaged position by the action of its spring.

4.2. blocstop™ safety devices

- Place the platform vertically beneath the suspension points.
- Insert the wire rope in the lever of the **blocstop™**. Insert the wire rope in the hoist (see paragraph 4.1).
- Set the hoist to the "lift" position in order to lift the temporary suspended platform 0.1 to 0.2 m. The suspension rope is mechanically tensioned and the **blocstop™** is in the open position.
- Manually insert the secondary rope in the **blocstop™** through the hole in the top of the housing. Push the secondary rope through from one side of the device to the other. Pull on the free end of the wire rope, until it is tensioned. Weight the wire rope by attaching the counterweight (which is approximately 8 kg) using the wire rope gripper, 0.2 m from the ground.

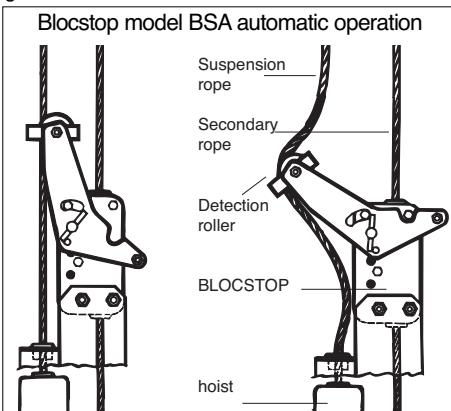

5. ANCHORING:

5.1. tirfor® machines:

Incorrect anchoring can lead to a serious risk. Before operating the hoist the user should always check that the anchorage point(s) for the device or the wire rope are strong enough to take the force to be applied.


The anchoring device for models TU6P and TU12P is a hook fitted with a safety catch. In all cases, the anchorage must be performed in such a way that the safety catch is in the correct closed position, pressing on the tip of the hook. These recommendations for the hook on the device also apply to the hook on the wire rope.

The TU24P model is attached using a removable anchor pin, which passes through the two lugs on the housing and is locked by a lock pin with a two-position (locked or unlocked) spring clip.


The following operations must be performed to anchor the device (fasten the anchor pin):

- Move the spring clip on the lock pin holding the anchor pin in the unlocked position.
- Remove the lock pin from the anchor pin.
- Pull the anchor pin to release it.
- Position the mounting clip on the platform stirrup between the lugs on the housing.
- Push the anchor pin back in, re-inserting it through the lug from which it was previously removed.
- Replace the lock pin in the hole in the anchor pin end, pushing it fully in.
- Lock the spring clip on the lock pin, ensuring that it is correctly locked on the anchor pin so that the lock pin cannot be removed.


▲ WARNING ▲ : For safety reasons it is essential to check that the anchoring devices (hook or pin) are locked correctly before taking up a load

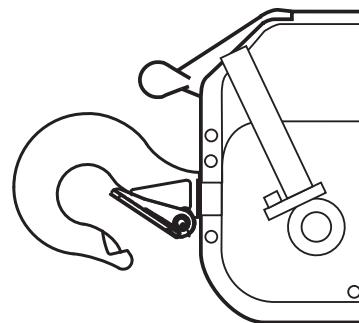


Machine anchor hook with catch in open position

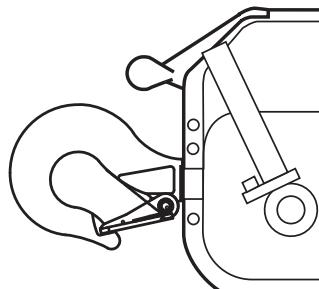


Machine anchor hook with catch in closed position.

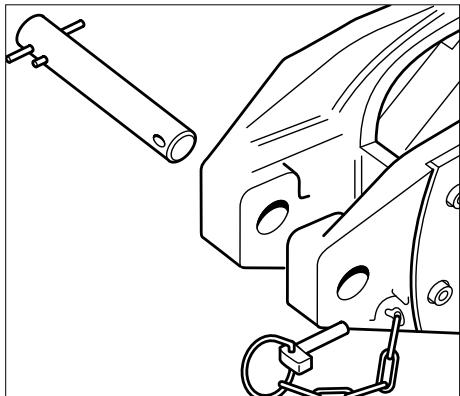


Anchor pin removed

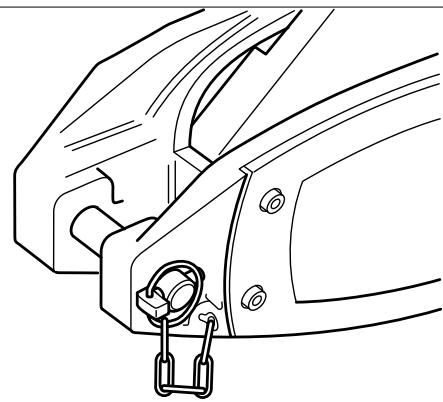

Anchor pin in position

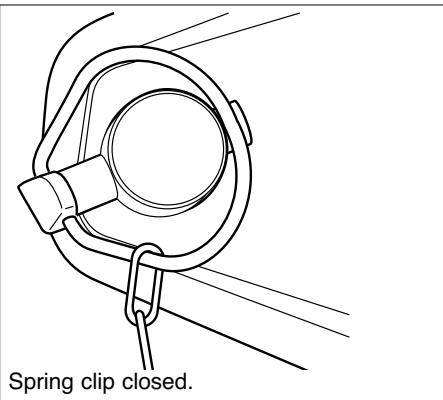


Spring clip closed.

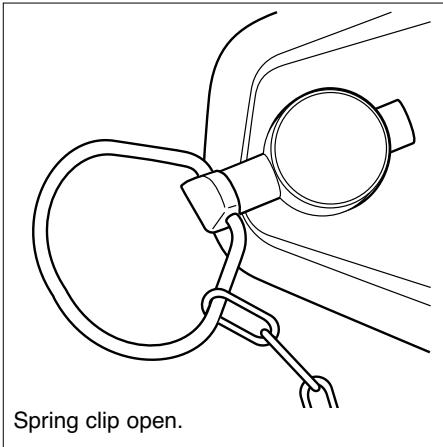

Spring clip open.

5.2. blocstop™ safety devices

The **blocstop™** safety device must be anchored by attaching it to the stirrup on the platform, or to the special device, using two H M 12 bolts for 15.301 and 20.301, and two H M 22 bolts for 35.30.

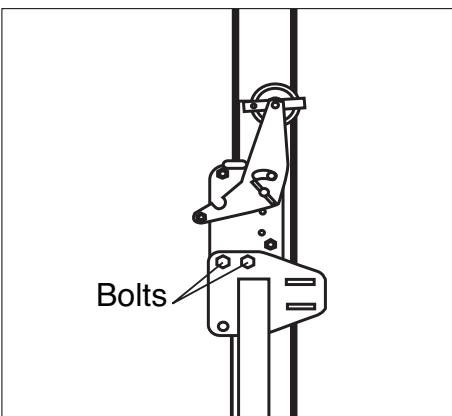

Wire ropes specially designed by TRACTEL for hoists and for the **blocstop™** safety device must be used. These wire ropes are fitted with hooks.

The anchoring hooks are fitted with a safety catch. In all cases the equipment must be anchored in such a way that the flap freely returns to the correct closed position, pressing on the tip of the hook.

▲ WARNING ▲ : It is essential for safe operation of the equipment that a check is made to ensure that the anchoring hooks are correctly locked before a load is applied.

6. OPERATION:

6.1. tirfor® hoists:

The **tirfor®** is very simple to operate by moving the telescopic handle with a to and fro movement whose movement can vary according to the preference of the operator.

Any interruption in operation results in the auto-

matic self-clamping of the two jaws on the wire rope, with the load equally distributed and held continuously.

The movements of the forward and reverse levers are double acting, with the load moving each time the lever is moved in either direction.

6.2. blocstop™ safety devices:

Once the **blocstop™** safety devices have been installed they require no action by the operator. They operate automatically during lifting and lowering operations.

▲ WARNING ▲ During lifting operations, always ensure that the secondary rope is sliding freely through the device. If it is not, the jaws must be opened. Tensioning the suspension rope automatically opens the jaws. If they do not open automatically, change the **blocstop™, replacing it with an equivalent device which operates correctly, and return the faulty device to TRACTEL S.A.S. for servicing and repair, or send it to an approved repairer.**

▲ WARNING ▲ During lowering operations, an immediate check must be carried out to ensure that the secondary rope slides freely through the device. If it does not, a lifting movement must be performed until the suspension rope is tensioned, thus opening the jaws

▲ WARNING ▲ : Operation of the lever on the **blocstop™ other than by the suspension rope is forbidden.**

▲ WARNING ▲ : Keeping the lever on the **blocstop™ in the "open jaws" position, by any means whatever, is forbidden.**

7. TAKING OUT OF OPERATION AND STORAGE

- Bring the platform to a position

approximately 0.1 m from the ground.

- Remove the counterweight from the secondary rope.
- Unwind the secondary rope from the storage reeler.
- Extract the secondary rope by hand by pulling it upwards.
- Totally remove the wire rope from the **blocstop™**.

7.1. tirfor® hoists:

- All loads must be removed from the device before it is released. Operate the reverse lever until the suspension rope is no longer tensioned (the cradle is resting on the ground).
- Remove the telescopic handle from the reverse lever, first turning it to unlock it.
- Return it to the telescoped position.
- Unwind the wire rope from the reeler.
- Release the device, then carry out the reverse of the procedure for setting the hoist into operation.
- Close the jaws of the device before storing it.
- Store the hoist in a dry area, away from adverse weather conditions.

7.2. blocstop™ safety devices:

- Unscrew the two fixing bolts and remove the **blocstop™** from the stirrup on the platform.
- Place the **blocstop™** in storage after cleaning and greasing it (see the "Maintenance" section), with the two bolts replaced in the holes in the housing

NOTE : It is advisable to change the brake nuts each time the device is assembled.



7.3. Wire ropes:

- Remove the hooks on the wire ropes from the upper attachment device.
- Attach the hooks to a rope and carefully lower them down the building.
- An operator must receive the suspension and secondary ropes at the bottom and wind them on the wire rope reelers.



- The wire ropes must be totally removed from the devices and stored on reelers.

Before winding them on the reelers, it is advisable to inspect them, clean them with a brush and grease them.

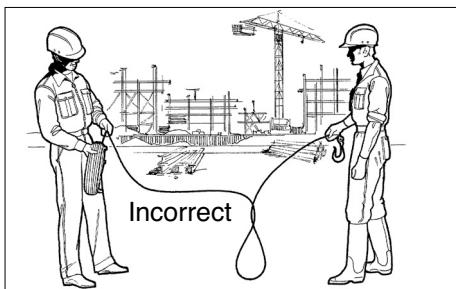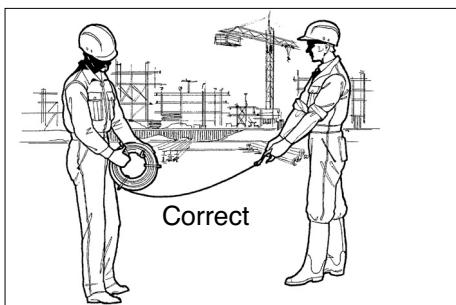

8. SAFETY DEVICES:

8.1. tirfor® hoists:

8.1.1. Overload safety devices:

All models have a system of shear pins. In the event of excessive overload, one or more pins (depending on the model) on the forward lever shear, making it impossible for movement to continue. However it still remains possible to carry out lowering operations using the reverse lever.

8.1.2. Releasing safety device:

Models TU6P, TU12P and TU24P have a "two handed" release system which makes it necessary to perform a deliberate operation to release the device (see section "Releasing and closing the jaws").

8.2. blocstop™ safety devices:

Faults are detected by the lever equipped with the detection roller which runs on the suspension rope. When the lever drops downwards, the **blocstop™** grips onto the secondary rope and prevents the platform from falling. There are four possible causes of faults or incidents which lead to the **blocstop™** gripping:

- Breaking** of the suspension rope
- Failure** of the hoist
- The platform **meeting** an obstacle while being lowered, creating slack on the suspension rope.
- Tilting** of the platform by more than 14 ° from horizontal.

For the first two faults (**breaking** of the suspension rope and **and hoist failure**), a rescue operation must be organised to evacuate the people on the platform.

For the third incident (**meeting an obstacle**), the operator must mechanically re-tension the suspension rope concerned by moving the hoist upwards and freeing the platform from the obstacle. The **blocstop™** releases its hold on the secondary rope automatically.




For the last incident (**tilting**), the operator must return the platform to horizontal by operating the hoist on the lower side, to move it upwards. The **blocstop™** releases its hold on the secondary rope automatically.

9. REPLACING THE SHEAR PINS:

Diagrams xx, yy and zz show the location of the shear pins on the TU6P, TU12P and TU24P hoists. The replacement pins are in the forward lever for the TU6P and TU12P and in the release lever for the TU24P (the plastic plug must be removed).

On models TU6P and TU12P the forward lever must first be removed from its shaft. This requires the use of a hub extractor. Remove the sheared pins using a pin extractor.

Clean the pin housings. Replace the forward lever on its shaft, and in the case of a TU6P or TU12P ensure that the half-housings of the axis

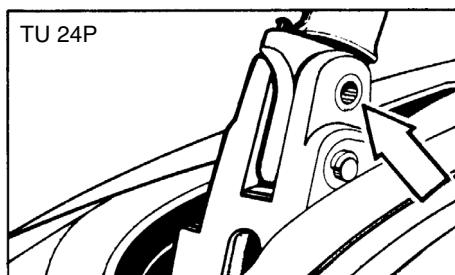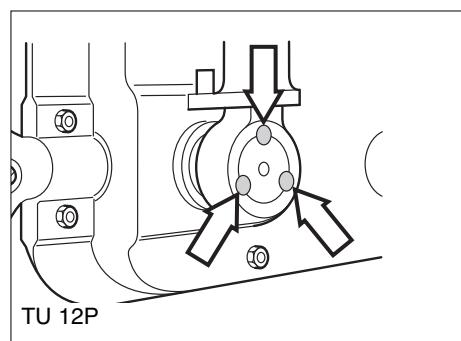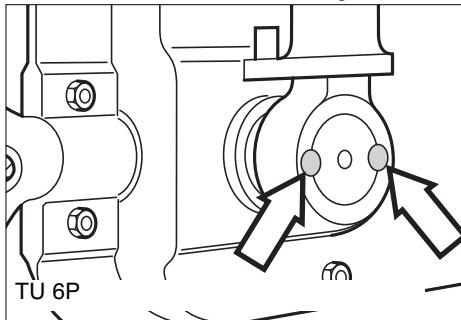

are lined up with those on the lever.

Push the new pins fully into their housings by tapping them in lightly with a hammer, after lining up the holes on the upper and lower parts of the lever (model TU24P).

▲ **WARNING ▲ :** Sheared pins should only be replaced with tirfor® pins of the same type.

Before putting the equipment back into operation, ensure that the cause of the overload has been removed. If necessary the loads in the cradle must be redistributed. A supply of spare pins should be kept to avoid prolonged operating stoppages.



10. WIRE ROPES :

▲ **WARNING ▲ :** To guarantee the safe operation of tirfor® and blocstop™ devices it is essential that they are only used with tirfor® wire ropes, which have been specially designed for this equipment and are of the correct strength, as specified in the

REMINDER: Using a wire rope other than the tirfor® special wire rope in a mechanism in the tirfor® hoist or the blocstop™ safety device constitutes a modification to the lifting system and removes the CE certification from the assembly.

European standards.

One end of the wire rope has a safety hook attached to a loop of the wire rope. This loop is fitted with a thimble and crimped in a metal sleeve. The other end of the wire rope is

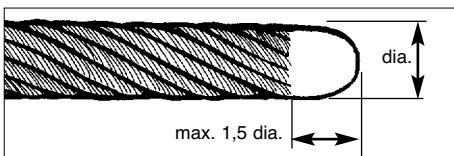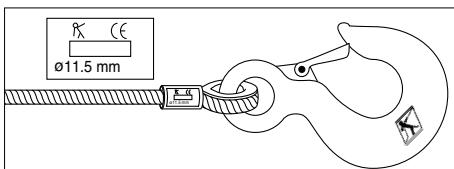

fused and tapered.


▲ WARNING ▲ Having wire rope which is in good condition is a guarantee of safety, just as much as having equipment which is in good condition.

It is therefore necessary to continuously monitor the condition of the wire rope and to clean and grease it with a cloth impregnated with oil or grease.

Greases and oils containing molybdenum disulfide or additives containing graphite should be avoided.


Visual inspection of the wire ropes:

The wire ropes should be examined on a daily basis when the equipment is in use in order to detect any signs of damage (deformation,

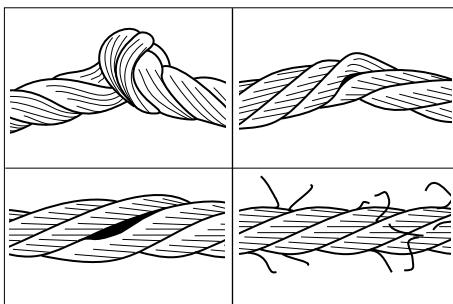

broken wires: see example fig.).

If there is any obvious damage, the wire rope should be checked by a competent person. Any wire rope whose nominal diameter has been reduced by 10 % as a result of wear must be

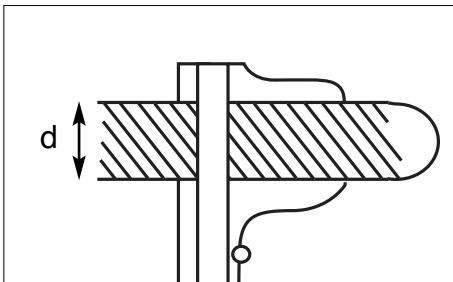

removed (measure as shown in fig.).

IMPORTANT : A tensioned wire rope must never be allowed to rub on an obstacle. Wire ropes must never be exposed to temperatures above 100°, or to attack from mechanical or chemical agents.

It is vital to check that the length of the wire ropes is greater than the lifting distance. Allow for at least a metre of wire rope to remain on the winding reeler.

Storage: see section 7.

11. MAINTENANCE :

The **tirfor®** machine and Blocstop™ device must be inspected, cleaned and lubricated at regular intervals, at least annually by an approved repairer.

To clean the devices, immerse them in a bath of solvent such as oil, petrol or white spirit (with the exception of acetone and its derivatives, and trichlorethylene and its derivatives) then shake them to remove sludge and any other foreign matter. Tip up the device so that the dirty liquid comes out of the lever apertures. Drain and leave to dry. It is then **essential to lubricate** the mechanism **thoroughly** by pouring oil (type SAE 90 or 120) into the holes in the housings as well as in the special aperture (oiler) on the TU6P and on the TU12P. Before pouring the oil in, release the device (which must not be supporting a load), and operate the levers to help the oil reach all parts of the mechanism.

N.B.: The device can never be overlubricated. Any device whose housing shows traces of impact or deformation, or whose hook (model TU6P and TU12P) is deformed, must be returned to a TRACTEL group approved repairer.

12. WARNINGS AGAINST HAZARDOUS OPERATIONS

If used in accordance with the instructions in this manual, the **tirfor®** and **blocstop™** devices are totally safe. However it is helpful to warn the operator against incorrect operation as described below.

The following is prohibited:

- Never use the devices described in this manual for lifting equipment.
- Never attempt to motorise the devices described in this manual.
- Never use **tirfor®** devices above their maximum working load.
- Never use **tirfor®** devices for operations other than those for which they are intended.
- Never attempt to operate the release mechanism whilst the equipment is supporting a load.
- Never obstruct the free movement of the forward and reverse levers or the release lever.
- Never operate the forward and reverse levers at the same time.
- Never use any method of operation other than the original TRACTEL telescopic handle.
- Never replace the original safety pins with items other than **tirfor®** pins of the same type.
- Never anchor the device by any other method than its anchoring device.
- Never lock the device in a fixed position or obstruct its self-alignment with the direction of the load.
- Never use the wire rope of the device as a lifting sling.
- Never apply a load to the wire rope which comes out on the anchorage side.
- Never hit the control devices.
- Never operate of the operating handle by more than one person.
- Never lift the platform so that the sleeve of the hook on the wire rope comes into contact with the housing.
- Never lower the platform so that the end of the wire rope comes close to the housing of the hoist.
- Never prevent the suspension rope from activating the **blocstop™** detection roller.
- Never position the two wire ropes (suspension and secondary) at a distance other than that indicated in the **blocstop™** manual.
- Never use a wire rope with more than 10 wires broken over a length of 30 times its diameter.
- Never use a wire rope whose diameter is reduced by more than 10% of its initial diameter.
- Never unwind the wire rope without leaving two complete turns on the reeler.
- Never position the wire ropes in a position other than vertical.

13. TROUBLESHOOTING :

1. If the forward (lift) lever rotates freely on its shaft without driving the mechanism, this indicates that the safety pins have sheared as a result of an overload. They should be replaced as described in section 9.

2. Pumping. Insufficient oil in the mechanism leads to a phenomenon known as "pumping" (not dangerous) occurring during forward operation (lifting): the device lifts and lowers a few centimetres, but goes no further. This phenomenon can be corrected by pouring oil into the housing. If necessary, move it in reverse (lowering) for a short distance to facilitate lubrication of the parts.

3. Jolts. Jerky movement in reverse (lowering) is also caused by insufficient oil. Proceed as indicated above.

4. Jamming. If the wire rope becomes jammed in the device, generally due to damage to the part of the wire rope inside the device, operation must be stopped. The load must be taken over by another device which provides the **statutory safety guarantees**, and the **Tirfor®** freed by releasing it when there is no load.



In an extreme situation where this is impossible, the device and its wire rope must be returned to a TRACTEL approved repairer.

5. Blockage. A damaged wire rope may remain blocked in the **blocstop™** safety device. The wire rope should be removed by a competent person. The **blocstop™** safety device should be serviced by TRACTEL SAS or a company in the TRACTEL group, or an authorised company.

14. REGULAR INSPECTION:

The following safety devices must be inspected daily:

- **anti-tilt device** (on ALTA L, S or TANGOR platform with rigid stirrups) by tilting the platform until the safety system on the lower hoist is tripped. Return the platform to the horizontal. Repeat the inspection operation for the device on the other side. This inspection must be carried out at a maximum height of 0.5 metres.
- **no-load device – slack wire rope device** : by resting the platform on the ground and checking the tripping of the safety jaws. Lift the platform up (approx. 0.2 m).
- The **tirfor®** hoist for lifting personnel and the **blocstop™** safety device must be inspected regularly by a TRACTEL approved repairer. This is compulsory every three months (for France: Decree of 1st march 2004, Section 5 Regular General Inspection article R233-11 of the labour law, Article 23 Frequency, Paragraph b).
- Regular maintenance of the devices consists in cleaning and oiling.

15. EQUIPMENT WHICH MAY BE USED WITH THE **tirfor®**

- DELTA/PORTAFIX suspension jibs
- TRACTEL parapet clamps
- RAILSCAF track
- ALTA L, S or TANGOR platform, with end stirrups.

Any other combination of equipment must be subject to an examination by a notified body

16. STATUTORY INSPECTION

Any company providing a **tirfor®** hoist with its **blocstop™** safety device for integration with a platform for lifting personnel to employed persons must ensure that the obligations under health and safety at work regulations are fulfilled as regards safety and the acceptance of the equipment by a notified body.

It is also the responsibility of every company to ensure that their employees have been fully and properly trained in the safe operation of the equipment.





FR	DECLARATION D'INCORPORATION	SE	FÖRSÄKTRAN OM ÖVERENSSTÄMMELSE
GB	INCORPORATION STATEMENT	GR	ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ
ES	DECLARACIÓN DE INCORPORACIÓN	PL	DEKLARACJA ZGODNOŚCI
IT	DICHIARAZIONE D'INCORPORAZIONE	RU	СЕРТИФИКАТ СООТВЕТСТВИЯ
DE	EINBAUERKLÄRUNG	HU	MEGFELELŐSÉGI NYILATKOZAT
NL	VERKLARING VAN OPNAME	CZ	PROHLÁŠENÍ O SHODĚ
PT	DECLARAÇÃO DE INCORPORAÇÃO	BG	ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ
DK	ERKLÆRING OM INDBYGNING	RO	DECLARATIE DE CONFORMATITATE
FI	LIITTÄMISVAKUUTUS	SK	VYHLÁSENIE O ZHODE
NO	INTEGRERINGSERKLÆRING	SI	IZJAVA O USTREZNOSTI



TRACTEL S.A.S.
RD 619, Saint-Hilaire-sous-Romilly,
F-10102 ROMILLY-SUR-SEINE
T : 33 3 25 21 07 00 - Fax : 33 3 25 21 07 11



représentée par / represented by / representado por / rappresentato da / vertreten durch / vertegenwoordigd door / representada por / repræsenteret af / edustajana / representert ved / företräds av / εκπροσωπούμενη από / reprezentowany przez / в лице / képviselő / zastoupená / представител / reprezentat de catre / zastúpená / ki ga predstavlja

M. Denis PRADON

Président Directeur Général / Chairman & Managing Director / Presidente Director General / Presidente Direttore Generale / Generaldirektor-Präsident des Verwaltungsrates / President-Directeur / Presidente / Administrerende direktør / Toimitusjohtaja / President og Generaldirektør / Vd och styrelseordförande / Πρόεδρος Γενικός Διευθυντής / Prezes / Президент и Генеральный Директор / Elnök-vezérigazgató / Generální ředitel / Генерален директор / Predsedinte Director General / Generálny riaditeľ / Predsednik generalni direktor



30/09/2009

 **Tractel** ®

F R	CERTIFIE QUE : la quasi-machine désignée ci-contre, est conforme aux règles techniques de sécurité qui lui sont applicables à la date de mise sur le marché de l'Union Européenne, par le fabricant. DISPOSITIONS APPLIQUÉES : voir ci-dessous	S E	INTYGAR ATT: den delvis fullbordade maskinen som avses på motstående sida överensstämmer med de tekniska säkerhetsregler som var tillämpliga när tillverkaren släppte produkten på Europeiska unionens marknad. TILLÄAMPLIGA BESTÄMMELSER: se nedan
G B	CERTIFIES THAT: the quasi-machine designated opposite complies with the technical safety rules applicable to it on the date it is placed on the European Union market by the manufacturer. MEASURES APPLIED: see below	G R	ΒΕΒΑΙΩΝΕΙ ΌΤΙ: το ημιτελές μηχάνημα που αναφέρεται δίπλα είναι σύμφωνο προς τους τεχνικούς κανόνες ασφαλείας που ισχύουν κατά την ημερομηνία διάθεσής του στην αγορά της Ευρωπαϊκής Ένωσης από τον κατασκευαστή. ΕΦΑΡΜΟΣΙΜΕΣ ΙΑΤΑΞΕΙΣ: βλέπε παρακάτω
E S	CERTIFICA QUE: la casi-máquina designada al lado, es conforme a las reglas técnicas de seguridad que le son aplicables en la fecha de comercialización de la Unión Europea, por el fabricante. DISPOSICIONES APLICADAS: ver a continuación	P L	ZAŚWIADCZA, ŻE: niniejsza prawie maszyna spełnia techniczne wymogi bezpieczeństwa odnoszące się do niej w dniu jej wprowadzenia przez producenta na rynek Unii Europejskiej. STOSOWANE PRZEPISY: patrz niżej
I T	CERTIFICA CHE: la quasi-macchina descritta a lato, è conforme alle norme tecniche di sicurezza in vigore alla data d'immissione sul mercato dell'Unione Europea da parte del costruttore. DISPOSIZIONI APPLICATE: vedere qui di seguito	R U	ПОДТВЕРЖДАЕТ, ЧТО: данная квазимашина соответствует правилам техники безопасности, применяемым к такому оборудованию на момент его выпуска на рынок производителем в странах Европейского союза. ПРИМЕНЯЕМЫЕ ПОЛОЖЕНИЯ: см. ниже
D E	ERKLÄRT, DASS: Die gegenüber bezeichnete unvollständige Maschine den technischen Sicherheitsbestimmungen entspricht, die zum Zeitpunkt des Inverkehrbringens in der Europäischen Union durch den Hersteller für die unvollständige Maschine gelten. ANGEWENDETE BESTIMMUNGEN: siehe unten	H U	TANÚSÍTJA, HOGY: a szemközt megnevezett részben kész gép megfelel a gyártó által az Európai Uniós forgalomba hozatal dátumán rá vonatkozó biztonsági műszaki szabalyoknak. ALKALMAZOTT RENDELKEZÉSEK: láss alább
N L	VERKLAART DAT: de onderstaand beschreven niet-voltooide machine conform de technische veiligheidsvoorschriften is die van toepassing zijn op de datum van de marktintroductie in de Europese Unie door de fabrikant. TOEPASBARE VOORSCHRIFTEN: zie hieronder	C Z	POTVRZUJE, ŽE: zářízení zde uvedené je v souladu s technickými bezpečnostními předpisy, platnými ke dni jeho uvedení výrobcem na trh v Evropské unii. PLATNÉ PŘEDPISY: viz zde níže
P T	CERTIFICA QUE: a quase-máquina indicada ao lado satisfaz as regras técnicas de segurança que lhe são aplicáveis na data da colocação no mercado da União Europeia, pelo fabricante. DISPOSIÇÕES APLICADAS: ver a seguir.	B G	УДОСТОВЕРЯВА, ЧЕ: частично окуплектованата машина, описана на страница, съответства на приложимите към нея технически правила за безопасност към датата на пускането ѝ на пазара на Европейския съюз от производителя. ПРИЛОЖИМИ РАЗПОРЕДБИ: виж по-долу
D K	ERKLÆRER AT: kvasi-maskinen specificeret ved siden af er i overensstemmelse med gældende tekniske sikkerhedsforskrifter på den dato, hvor fabrikanten har markedsført den i den Europæiske Union. GÆLDENDE BESTEMMELSER: se nedenfor	R O	CERTIFICĂ FAPTUL CĂ: cvasimașina denumită alături este conformă cu reglementările tehnice de siguranță aplicabile în cazul său la data lansării pe piață Uniunii Europene de către producător. DISPOZIȚII APLICATE: a se vedea mai jos
F I	VAKUUTTAA, ETTÄ: tässä mainittu koneenosa esitetty täytää tekniset turvamääräykset, jotka ovat voimassa, kun valmistaja tuo laitteen Euroopan unionin markkinille. LAITTEESEN SOVELLETTAVAT MÄÄRÄYKSET: katso alta	S K	POTVRDZUJE, ŽE: uvedené zariadenie je v súlade s technickými bezpečnostnými predpismi platnými ku dňu jeho uvedenia výrobcom na trh v Európskej únií. PLATNÉ PREDPISY: pozrite si ďalej
N O	SERTIFISERER AT: den delmaskinen som beskrives på motsatt side er i overensstemmelse med de tekniske sikkerhetsregler som gjelder på det tidspunktet som fabrikanten innførte maskinen på markedet. GJELDENDE BESTEMMELSER: se nedenfor	S I	POTRJUJE: da je v nadaljevanju opisana naprava v skladu s tehničnimi varostnimi pravili, ki zanje veljajo na datum, ko jo je proizvajalec postal na tržišče Evropske Unije. VELJAVNA DOLOČILA: glej spodaj

DÉSIGNATION / DESIGNATION / DESIGNACIÓN / DESIGNAZIONE /
BEZEICHNUNG / BESCHRIJVING / DESIGNAÇÃO / BETEGNELSE / NIMI-
TYS / BENEVNELSE / BETECKNING / ONOMAΣΙΑ / NAZWA / НАИМЕНОВАНИЕ
/ MEGNEVEZÉS / NÁZEV / НАИМЕНОВАНИЕ / DENUMIRE / NÁZOV / OPIS

Treuil à mâchoires à câble / Winch with cable grip-jaw / Cabrestante con mor-
dazas de cable / Argano a ganasce a cavo / Mehrzweckseilzug / Takel met
kabelopspanner / Guincho de maxilas de cabo / Hejsespil med kæber til kabel
/ Vintturi, kaapelileuat / Kabelvinsj med kjefter / Vinsch med linflås / **Бароўлко**
σιρματόσχοινου με δαγκάνες / Wciągarka linowa ze szczękami / Подъемник с
зажимами для троса / Sodronyköteles vonszoló / Navijak s čelustiami a lanom /
Лебедка със спирачна челюст за въже / Trolie cu falci cu cablu / Navijak s æ°usEa-
mi a lanom / Kabelsko vreteno s čeljustmi


APPLICATION / APPLICATION / APLICACIÓN / APPLICAZIONE / ANWENDUNG / TOE-
PASSING / APLICAÇÃO / ANVENDELSE / KÄYTTÖ / BRUKSMRÅDE / ANVÄNDNING
/ ΕΦΑΡΜΟΓΗ / ZASTOSOWANIE / ПРИМЕНЕНИЕ / ALKALMAZÁSI TERÜLET / APLIKA-
CE / ПРИЛОЖЕНИЕ / DOMENIU DE APLICARE / APLIKÁCIA / UPORABA

Levage de personnes / Manriding / Elevación de personas / Sollevamento di
persone / Heben von Personen / Hissen van personen / Elevação de pessoas /
Ophejsning af personer / Henkilöiden nostaminen / Løfting av personer /
Personlyft / Ануфрапт ат ѡв / Podnoszenie osób / Для подъема людей /
Személyek emelése / Zvedání osob / Повдигане на хора / Ridicare de persoane /
Zdvíhanie osôb / Dviganje oseb /

MARQUE / MAKE / MARCA / MARCA / MARKE / MERK / MARCA / MÆRKE / MERKKI
/ MERKE / MÄRKE / ΕΜΠΟΡΙΚΟ ΣΗΜΑ/MARKA / ФИРМА / MÁRKA / ZNAČKA / MAPKA /
MARCA / ZNAČKA / ZNAMKA

tirfor® TU P

TYPE / TYPE / TIPO / TIPO / TYP / TYPE / TIPO / TYPE / TYYPPI / TYPE /
TYP / ΤΥΠΟΣ / TYP / ТИП / TÍPUS / TYP / ТИП / TIP / TYP / TIP

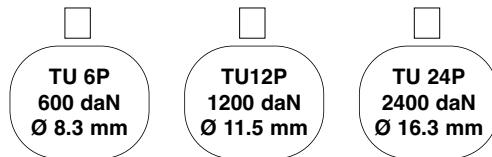

Nº DE SÉRIE / SERIAL NO / N° DE SÉRIE / Nr. DI SERIE / SERIEN-NR / SERIENNUMMER / N° DE SÉRIE / SERIE- NUMMER / SARJANUMERO / SERIENNUMMER / SERIENR / ΣΕΙΡΙΑΚΟΣ ΑΡΙΘΜΟΣ / Nr SERII / N° СЕРИИ / SZÉRIASZÁM / VÝROBNÍ ČÍSLO / СЕРИЕН N°/ NR. DE SERIE / VÝROBNÉ ČÍSLO / SERIJSKA ·	
---	--

F	La mise en service est interdite tant que l'appareil de levage de personnes, dans lequel doit être incorporé la présente quasi-machine, n'aura pas été déclaré conforme aux dispositions de la Directive Machine ou, aux dispositions nationales de transposition de cette Directive dans le pays de mise en service.	S	Det är förbjudet att använda personlyftsutrustningen som denna delvis fullbordade maskinen ska integreras i, så länge den inte har förklarats uppfylla kraven i maskindirektivet eller nationella bestämmelser för införlivande av detta direktiv i landet där den ska användas.
G	Utilization is prohibited so long as the man lifting device in which this quasi-machine will be incorporated has not been declared compliant with the requirements of the Machinery Directive or with the national measures reflecting this Directive in the country of use.	G	Απαγορεύεται η θέση σε λειτουργία εφόσον η συσκευή ανύψωσης απόμιν, στην οποία πρόκειται να ενσωματωθεί το παρόν ημιτελές μηχάνημα, δεν θα έχει δηλωθεί σύμφωνη προς τις διατάξεις της Οδηγίας περί Μηχανημάτων ή τις εθνικές διατάξεις μεταφοράς της Οδηγίας αυτής στη χώρα χρησιμοποίησης.
E	La puesta en servicio está prohibida mientras el aparato de elevación de personas, en el cual debe incorporarse la presente casi-máquina, no haya sido declarado conforme a las disposiciones de la Directiva Máquina o a las disposiciones nacionales de transposición de esta Directiva en el país de puesta en servicio.	P	Eksplotacija jest zabroniona, jeżeli urządzenie do podnoszenia osób, w którego skł ad wchodzi niniejsza prawie maszyna, nie zostało oznaczone jako zgodne z wymogami Dyrektywy Maszynowej lub przepisami krajowymi związanymi z realizacją tej dyrektywy w kraju użytkowania urządzenia.
I	"La messa in esercizio è vietata fino a quando l'apparecchio di sollevamento persone, nel quale deve essere incorporata la presente quasi-macchina, non sarà stato dichiarato conforme alle disposizioni della Direttiva Macchine o alle disposizioni nazionali di trasposizione di questa Direttiva nel paese di messa in esercizio."	R	Категорически запрещается ввод в эксплуатацию данного снаряжения, если не было заявлено, что устройство для подъема людей, частью которого является настоящая квазимашинка, соответствует положениям Директивы по охране труда в машиностроении или положениям местного законодательства, отражающим Директиву в стране использования снаряжения.
D	Die Inbetriebnahme ist verboten, solange die Konformität des Personenhebezeugs, in das diese unvollständige Maschine eingebaut werden soll, mit den Bestimmungen der Maschinenrichtlinie oder mit den nationalen Rechtsvorschriften zur Umsetzung dieser Richtlinie in dem Land der Inbetriebnahme nicht erklärt wurde.	H	Az üzembe helyezés tilos mindaddig, amíg az a személyemelő berendezés, amelybe a jelen részben kész gép beépítésre kerül, nincs megfelelő nek nyilvánítva a gépekre vonatkozó irányelvben vagy ezen irányelv használáti országba való áltültetésében megfogalmazott követelményeknek.
N	De ingebruikstelling is verboden zolang het hijstoel voor personen waarin deze niet-voltooide machine moet opgenomen worden niet conform de schikkingen van de Machine Richtlijn verklaard werd, of met de nationale transpositievoorschriften van deze Richtlijn in het land van ingebruikname.	C	Uvedení do provozu je zakázáno do té doby, než zdviňné zařízení osob, do níž má být dané zařízení začleněno, bude prohlášeno v souladu s ustanoveními Směrnice o strojích nebo s tuzemskými předpisy převádějícími tuto Směrnici v zemi, kde bude uvedeno do provozu.
P	A colocação em serviço é proibida enquanto o aparelho de içamento de pessoas, no qual será incorporada a presente quasi-máquina, não tiver sido declarado conforme às disposições da Directiva Máquinas, ou às disposições nacionais de transposição desta Directiva no país da colocação em serviço.	B	Забранява се пускането в експлоатация, докато за механизма за повдигане на хора, в който трябва да бъде вградена частично окомплектованата машина, не бъде декларирано, че съответства на разпоредбите на Директивата за машините или на националните разпоредби, въвеждащи тази директива в страната на пускане в експлоатация.
D	Ibrugtagning er forbudt, så længe apparatet til ophejsning af personer, i hvilken nærværende kvasi-maskine skal integreres, ikke er blevet erklæret overensstemmende med bestemmelserne i Maskindirektivet eller med de nationale bestemmelser, som gennemfører dette direktiv i det land, hvor apparatet skal bruges.	R	Punerea în funcțione este interzisă cât timp aparatul de ridicare de persoane în care trebuie integrată această cvasimăsină nu este declarat și conform cu dispozițiile Directivei Mașini sau cu dispozițiile naționale care transpun această directivă din țara în care aparatul este pus în funcționare.
F	On kielletyä ottaa käyttöön sellaista henkilöiden nostolaitetta, johon tämän koneenosan tulee kuulua, ennen kuin laitteiden on vakuutettu täytävän konedirektiivin määräykset sekä laitteen käyttöönottomaan lainsäädäntöön kuuluvien kansallisten lakienvaatimukset, jotka liittivät tämän direktiivin osaksi käyttöönottomaan lainsäädäntöä.	S	Uvedenie do prevádzky je zakázané dovtedy, kým nebude zdvíhacie zariadenie osôb, do ktorého má byť dané zariadenie začlenené, vyhlásené zo zariadenia v súlade s ustanoveniami smernice o strojoch alebo s vnútrosťou týmimi predpismi vykonávajúcimi túto smernicu v krajinе, kde bude uvedené do prevádzky.
N	Det er forbudt å sette i drift apparatet for løfting av personer som denne delmaskinen skal integreres i så lenge denne ikke er blitt erklært i overensstemmelse med bestemmelserne i Maskindirektivet, eller andre nasjonale bestemmelser som kommer i tillegg til Direktivet i det landet hvor maskinen skal settes i drift.	S	Vklop delovanja je prepovedan, dokler aparat za dviganje oseb, v katerega mora biti vgrajena ta naprava, ne prejme deklaracije o skladnosti z določili Direktive o strojih ali z nacionalnimi določili, v katere je bila prenesena ta Direktiva v državi, kjer se vklop izvaja.

Nom de l'utilisateur	Date de mise en service
User name	Date of first use
Naam van de gebruiker	Datum indienststelling
Name des Benutzer	Datum der Inbetriebnahme

REVISION - REVISION - REVISIE - PRÜFUNG

Nom de l'utilisateur	Date de mise en service
User name	Date of first use
Naam van de gebruiker	Datum indienststelling
Name des Benutzer	Datum der Inbetriebnahme

REVISION - REVISION - REVISIE - PRÜFUNG

Nom de l'utilisateur	Date de mise en service
User name	Date of first use
Naam van de gebruiker	Datum indienststelling
Name des Benutzer	Datum der Inbetriebnahme

REVISION - REVISION - REVISIE - PRÜFUNG

FR TRACTEL S.A.S.

RD 619 Saint-Hilaire-sous-Romilly, B.P. 38
F-10102 ROMILLY-SUR-SEINE
T : 33 3 25 21 07 00 – Fax : 33 3 25 21 07 11

LU TRACTEL SECALT S.A.

3, Rue du Fort Dumoulin – B.P. 1113
L-1011 LUXEMBOURG
T : 352 43 42 42 1 – Fax : 352 43 42 42 200

DE TRACTEL GREIFZUG GmbH

Scheidtbachstrasse 19-21
D-51469 BERGISCH-GLADBACH
T : 49 2202 10 04 0 – Fax : 49 2202 10 04 70

GB TRACTEL UK LTD

Old Lane, Halfway
SHEFFIELD S20 3GA
T : 44 114 248 22 66 – Fax : 44 114 247 33 50

ES TRACTEL IBÉRICA S.A.

Carretera del medio 265
E-08907 L'HOSPITALET (Barcelona)
T : 34 93 335 11 00 – Fax : 34 93 336 39 16

IT TRACTEL ITALIANA S.p.A.

Viale Europa 50
I-20093 Cologno Monzese (MI)
T : 39 02 254 47 86 – Fax : 39 02 254 71 39

NL DK TRACTEL BENELUX B.V.

BE LU Paardeweide 38
NL-4824 EH BREDA

T : 31 76 54 35 135 – Fax : 31 76 54 35 136

PT LUSOTRACTEL LDA

Alto Do Outeiro Armazém 1 Trajouce
P-2785-086 S. DOMINGOS DE RANA
T : 351 214 459 800 – Fax : 351 214 459.809

PL TRACTEL POLSKA Sp. Zo.o

ul. Bysławska 82
04-993 Warszawa
T : 22 616 42 44 - Fax : 22 616 42 47

CA TRACTEL LTD

1615 Warden Avenue Scarborough
Ontario M1R 2T3
T : 1 416 298 88 22 – Fax : 1 416 298 10 53

CN TRACTEL CHINA LTD

3rd Floor, Block B, Workshop 3,
N° 255 Cai Lun Road
Zhang Jiang Hi tech Park, Pudong New Area
Shanghai 201203 People's Republic of China
T : +86 (0) 21 6322 5570
Fax : +86 (0) 21 5353 0982

SG TRACTEL SINGAPORE Plc

50 Woodlands Industrial Parc E7
Singapore 75 78 24
T : 65 675 73113 – Fax : 65 675 73003

AE TRACTEL MIDDLE EAST

P.O. Box 25768
DUBAI
T : 971 4 34 30 703 – Fax : 971 4 34 30 712

US TRACTEL Inc

51 Morgan Drive
Norwood, MA 02062
T : 1 781 401 3288 – Fax : 1 781 828 3642

RU TRACTEL RUSSIA O.O.O.

ul. Petrovka, 27
Moscow 107031
Russia
T : +7 915 00 222 45 – Fax : +7 495 589 3932